


Program Press Settings

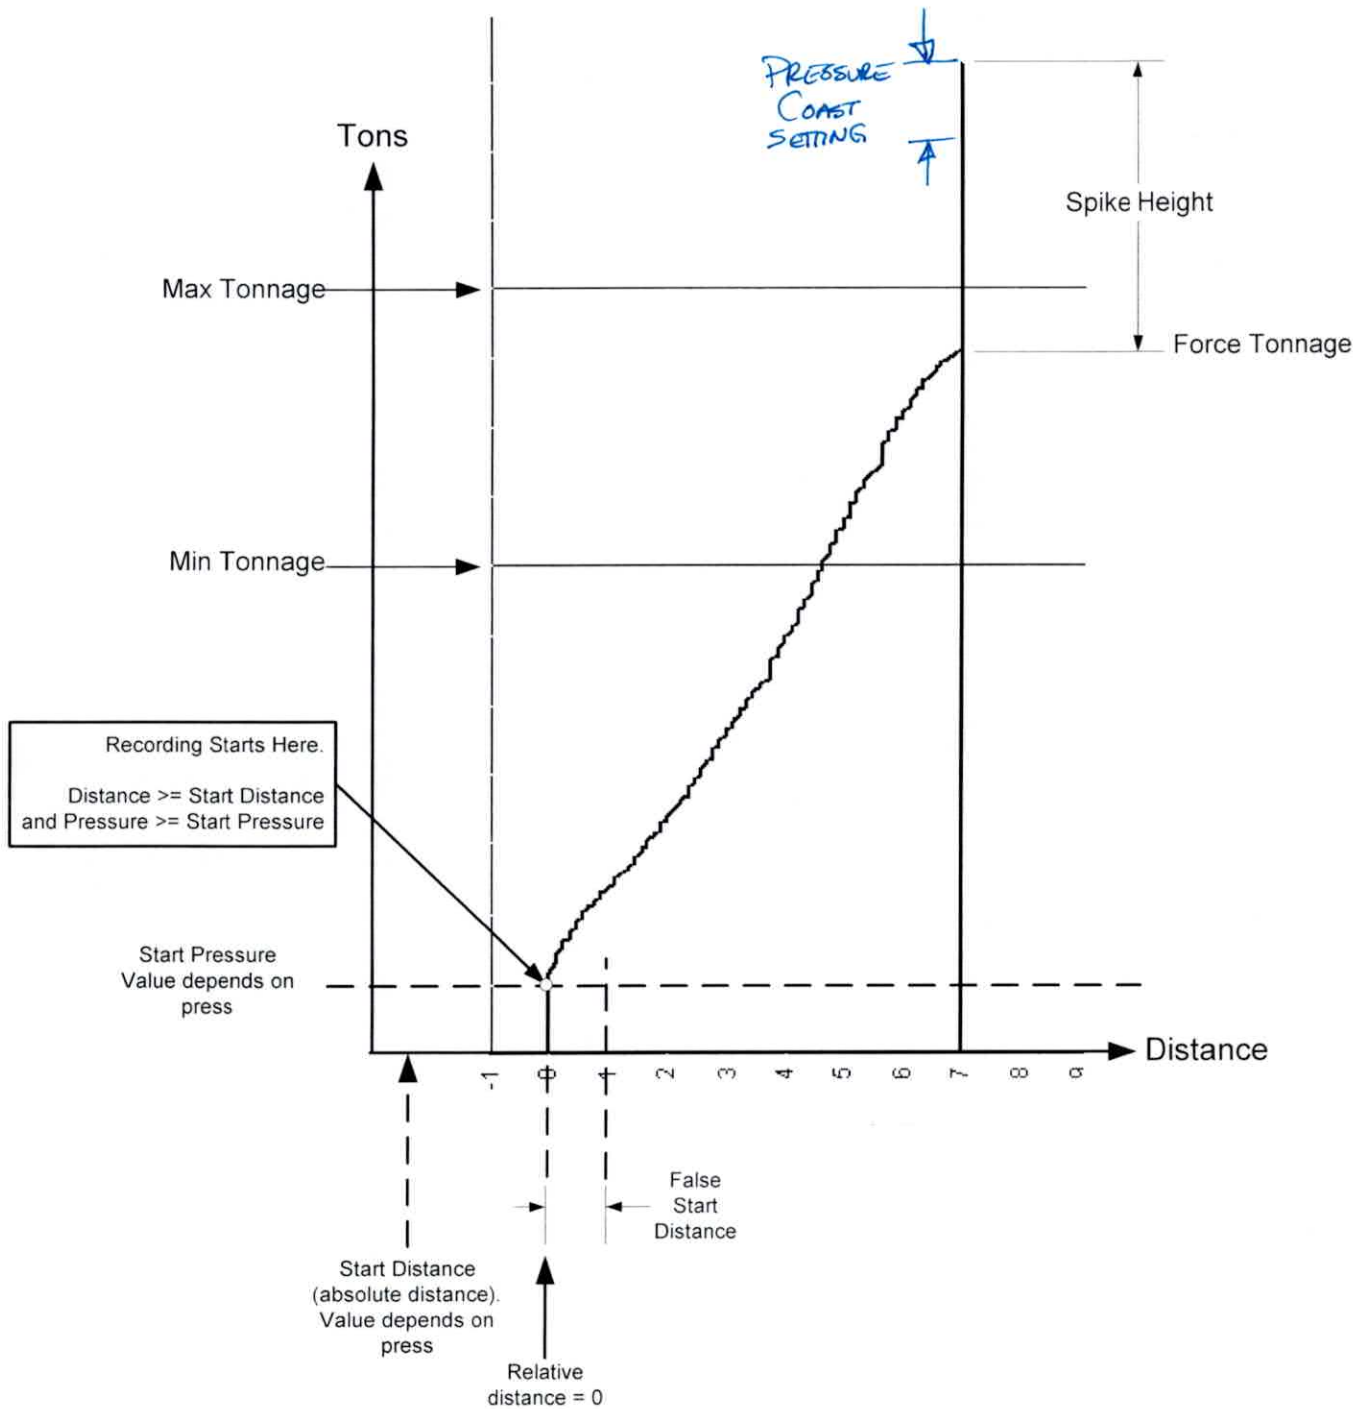

Notes:

1. Must meet start distance (absolute distance) and start pressure to begin recording.
2. Once recording begins, if pressure drops to below start pressure before false start distance is reached, the recording stops and distance resets to 0. This is to prevent recording "bumping".
3. Once the false start distance is exceeded then the chart is stored as is.